

Installation instruction

Additional information about LegaMove can be found for download from the Hettich website www.hettich.com under Service / Media centre



Detailed operation instructions

Technik für Möbel



All persons involved in the installation, maintenance or operation of this system should follow these instructions carefully.

Installation:

- The installation and operation of the desk frame have to be made in accordance with the installation and operating instructions to avoid the risk of injury.
- At installation and operation the generally applicable statutory and other rules and regulations of the country of operation as well as the applicable environmental regulations must be observed. The local applicable regulations of the professional associations or other supervisory authorities are to be observed.
- Electrical cables should not be exposed to crushing, bending and tensile stress.
- The socket outlet for connection to the mains supply must be installed by a licensed electrician to exclude hazards to persons and property.

Operation:


- The system is intended for use exclusively for height adjustable working desks in compliance with the specified maximum loads. Any other use is considered improper. The manufacturer is not liable for any resulting damage. The risk lies entirely with the user.
- The system should only be used in dry, dust-free areas without exposure to direct sunlight. Do not allow liquids to penetrate into the interior of the components, otherwise electric shocks or short circuits may result.
- The duty cycle is 10%, meaning 2 minutes "ON" and 18 minutes "OFF" or 1 minute "ON" and 9 minutes "OFF".
- Loads must not be exceeded.

Safety regulations:

- To avoid shearing, jamming and crushing, keep a minimum distance of 25mm towards body parts and objects.
- When adjusting the desk height, the user has to make sure that nobody will be injured and no object will be damaged. The desk must not collide with stationary objects so that the desk is not turning over.
- Do not let children unsupervised with this system. Children can not assess the threat posed by the force of the system.
- Never open any components of the system. Unauthorized opening and improper repairs could expose the user to risks and the warranty becomes void. Opening or repairing the electrical equipment must only be carried out by the staff of the manufacturer.
- Unauthorized modifications to the system exclude any liability of the manufacturer for any resulting damage.
- In case of malfunctions such as smoke or odor or unusual noise or visible external damage, the product must not be operated. Unplug the power cord.


Fulfilled standards:


2006/42/EG 2014/30/EU 2014/35/EU EN ISO 12100: 2011-03 EN 349: 2008-09 EN ISO 13857: 2008-06 EN 60335-1: 2010 EN 62233: 2008-11 DIN EN ISO 13849-1 Category B, Performance Level b (2006) 2011/65/EU (RoHs) 1907/2006/EU (REACH) DIN EN 82079-1: 2013-06 DIN EN ISO 7779: 2011-01 AfPS GS 2014: 01 PAK EN 61000-6-2: 2006-03 EN 61000-6-3: 2011-09 EN 61000-3-2: 2014-08 EN 61000-3-3: 2013

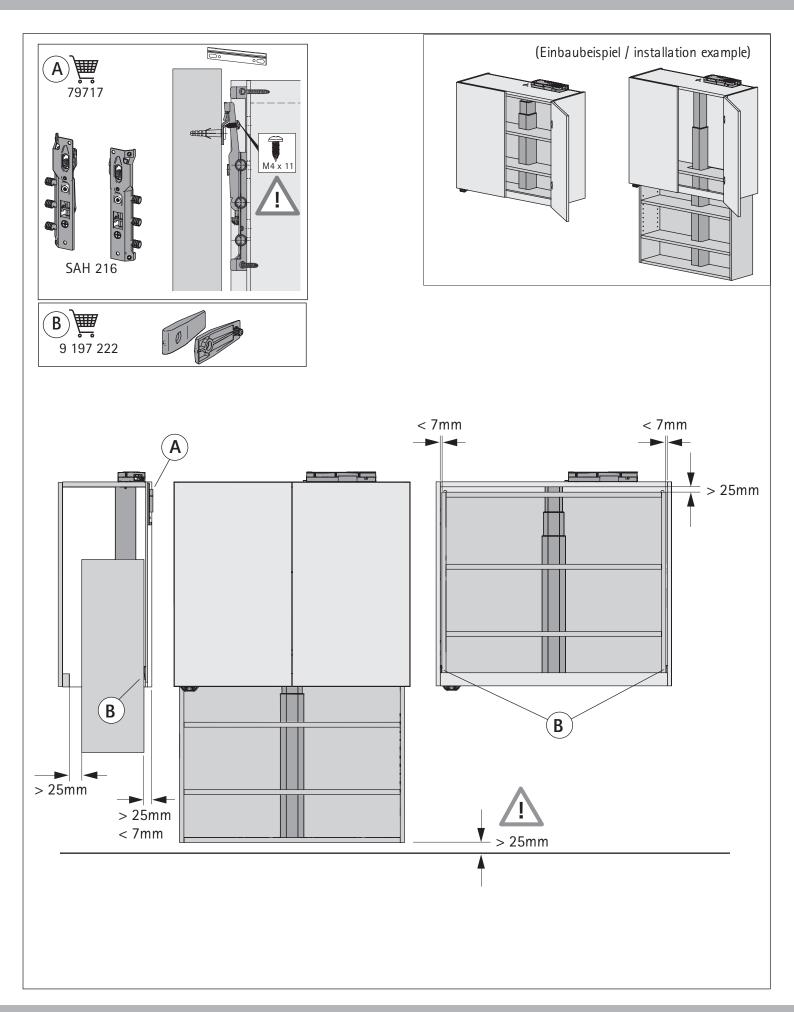

Technik für Möbel



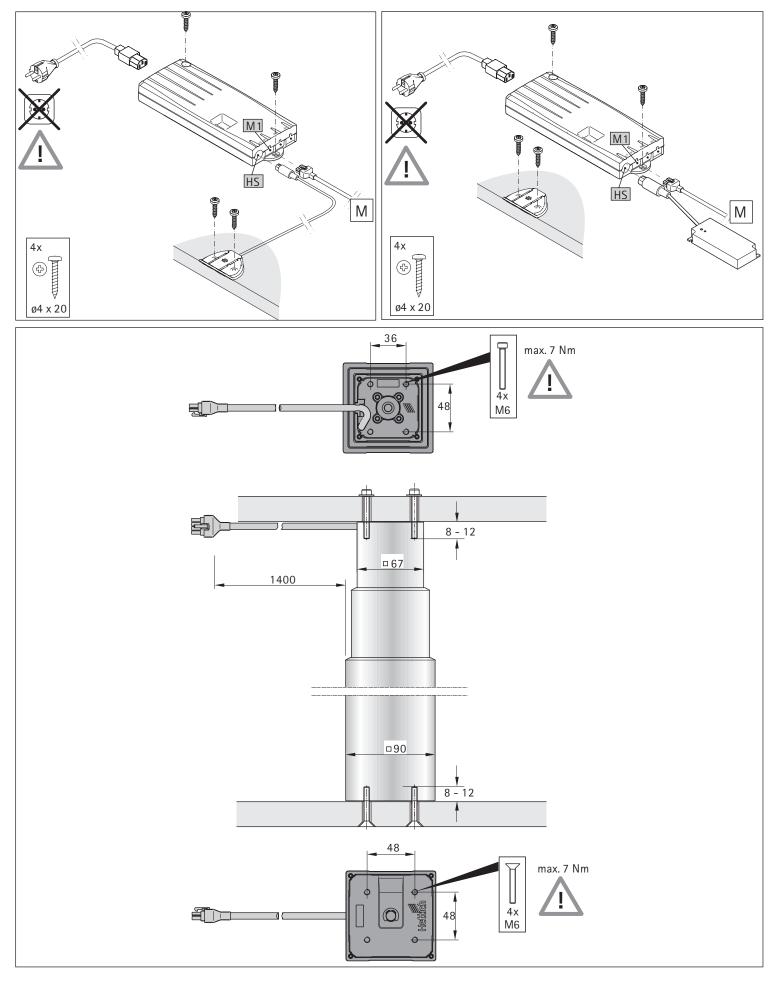

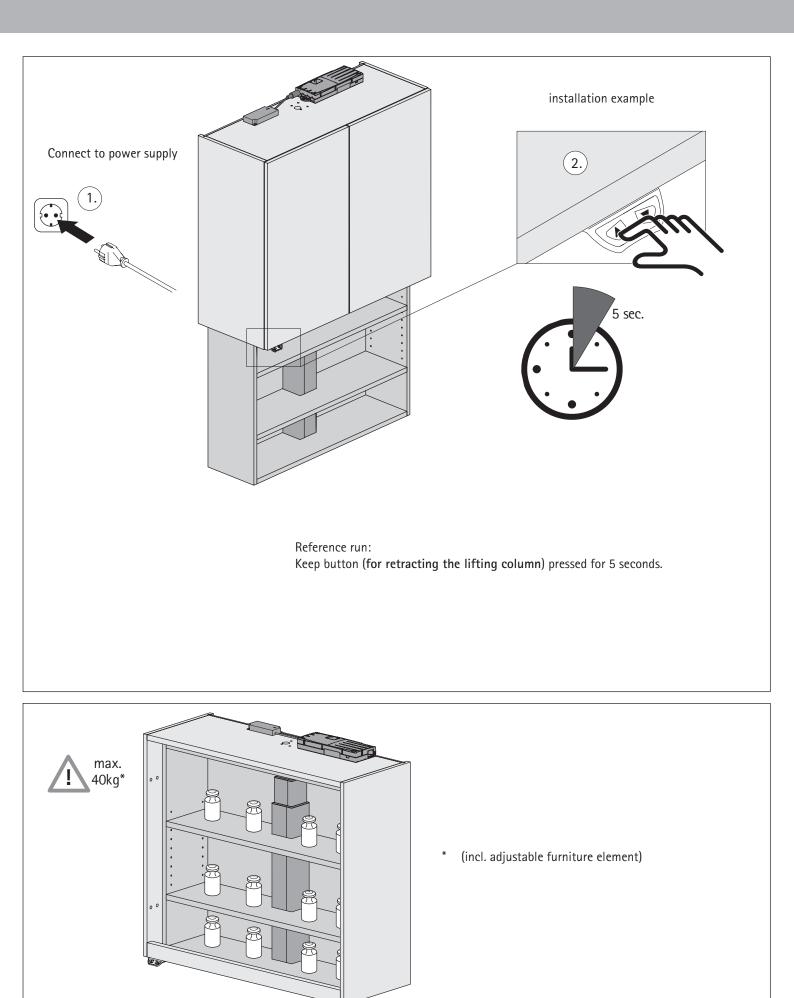



Technik für Möbel

1 Initial start-up

Please observe the following before starting up the LegaMove / LegaDrive lifting column system for the first time:

- Check that the LegaMove / LegaDrive lifting column system has been installed in compliance with the regulations specified above!
- Ensure that all lifting columns and handset / wireless receiver are connected to the control unit and the mains connection has been established.
- Use the documentation of the furniture manufacturer to ensure that the . piece of furniture is installed properly.
- Ensure that the piece of furniture is placed on a level surface and properly aligned. For wall mounting ensure that the piece of furniture is attached and hung up according to manufacturer specifications.
- Ensure that all moving parts can move freely within the required clearance zone and that the safety distances are maintained!
- Check the proper operation of the safeguards!



Operation instructions wireless handset

under Service / Media centre

LegaMove

Detailed operation instructions:

LegaDrive

 
Additional information about LegaMove / LegaDrive can be found for download from the Hettich website www.hettich.com

2 Programming / logging off the wireless handset

The wireless receiver must be programmed (taught) to be able to understand the radiogram from the wireless handset. The teach-in procedure creates an assignment only in the wireless receiver.

The distance between the wireless handset and the wireless receiver should not exceed 0.5 m during the programming.

The wireless receiver has a "teach-in" key (A) for programming and a "control" LED (B) as an indicator.

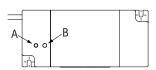

Programming

Follow the steps described below:

- 1. Briefly press the "teach-in" key at the wireless receiver. The "control" LED lights up.
- 2. Immediately send a radio signal (approx. 2 s) using the wireless handset. You can press the "up" or "down" key to send the signal. The LED switch off briefly.
- 3. The teach-in procedure automatically ends after approx. 8 s. When the "up" or "down" key of the wireless handset is pressed again, the procedure ends immediately.

Logging off

- Follow the steps described below: 1. Press the "teach-in" key at the wireless receiver. The "control" LED lights up (flashes).
- 2. Continue to hold the key down until the LED stops flashing. This completely deletes the wireless receiver memory.

3 Reset on starting up for the first time

A reference movement must be carried out during initial start-up.

Note

The reference movement may only be carried out when the piece of furniture is unladen. Ensure that the LegaMove / LegaDrive lifting column is capable of being retracted completely as otherwise an incorrect reference position will be saved. This can result in damage to components and collisions during subsequent operation.

