 
 


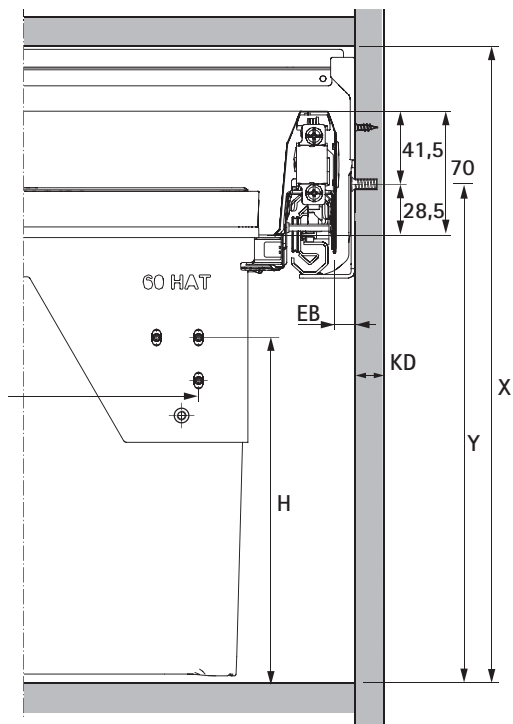


ArciTech




KD mm	EB mm
16	15
18	13
19	12

 mm	Y mm	H mm	X mm
295	315	228	400
460	480	393	565
505	525	438	610






 
 mm	Z mm
300	76
400	149
450	227
500	227
600	392

 ArciTech


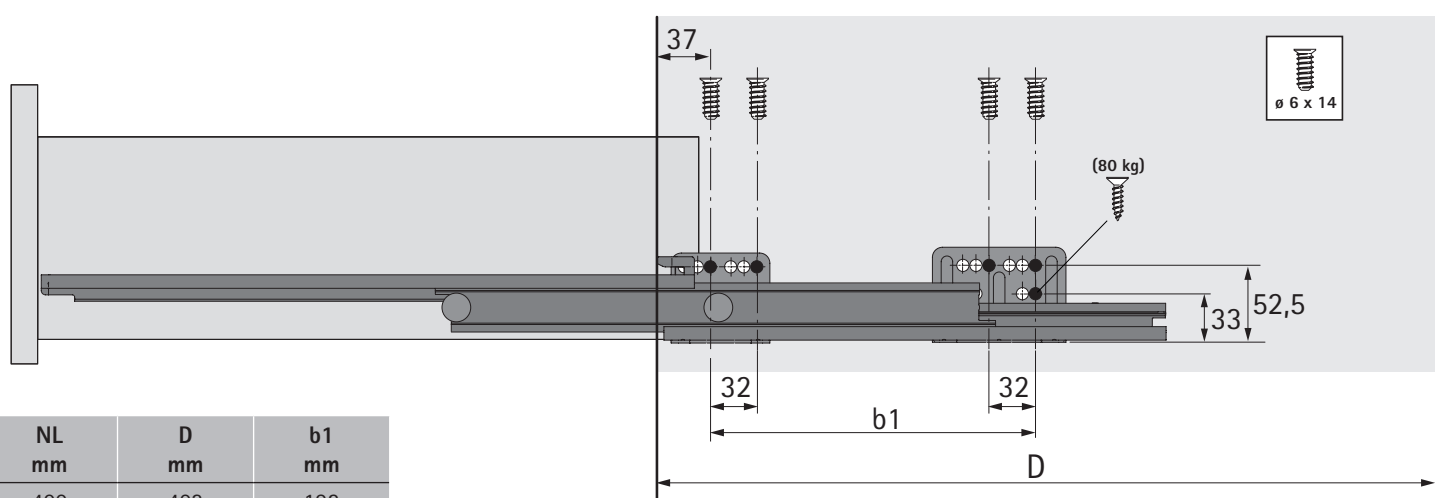




NL mm	D mm	b1 mm
400	403	192
500	503	224

   
 
 
 
ArciTech Pull

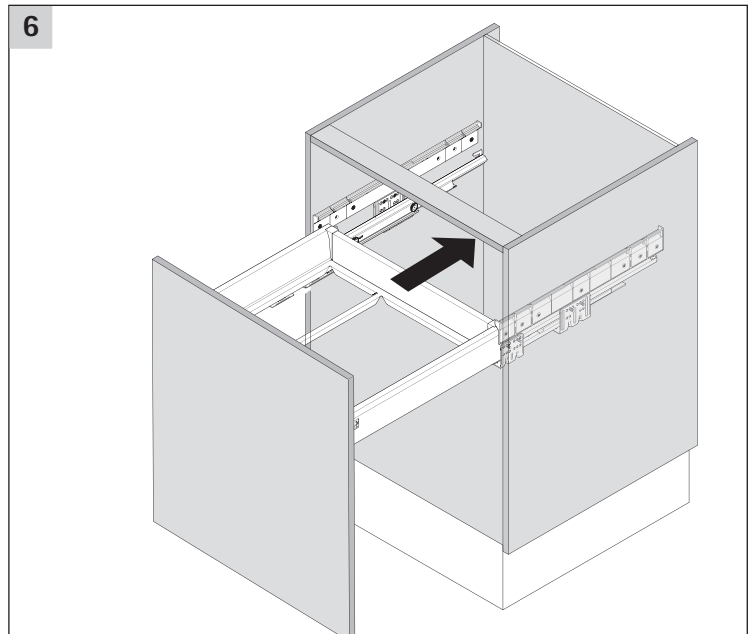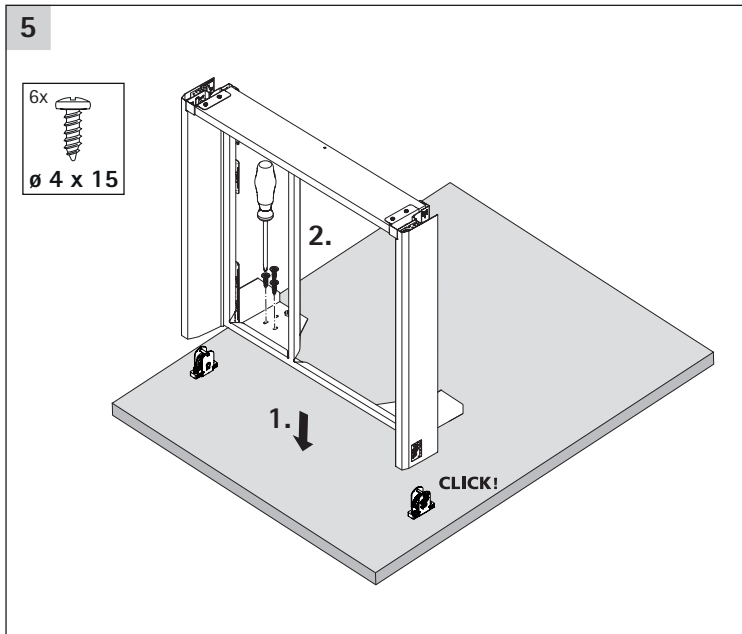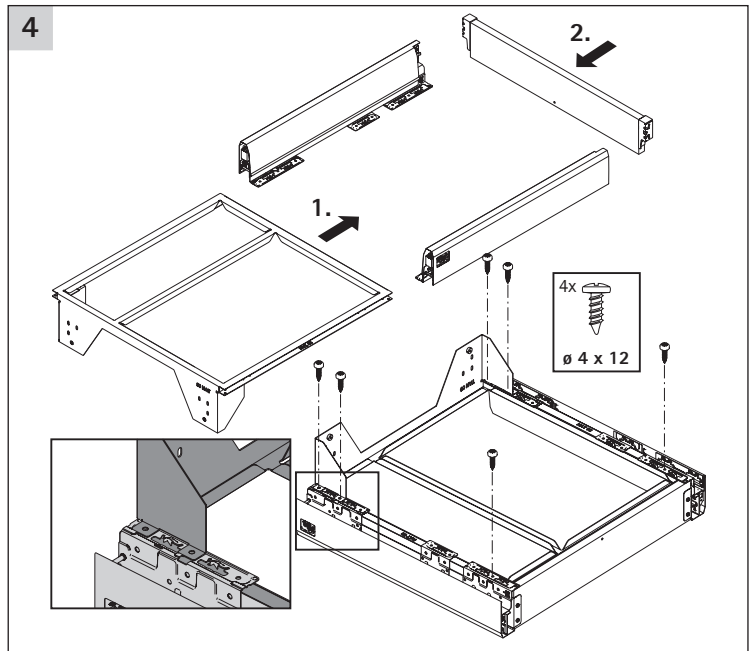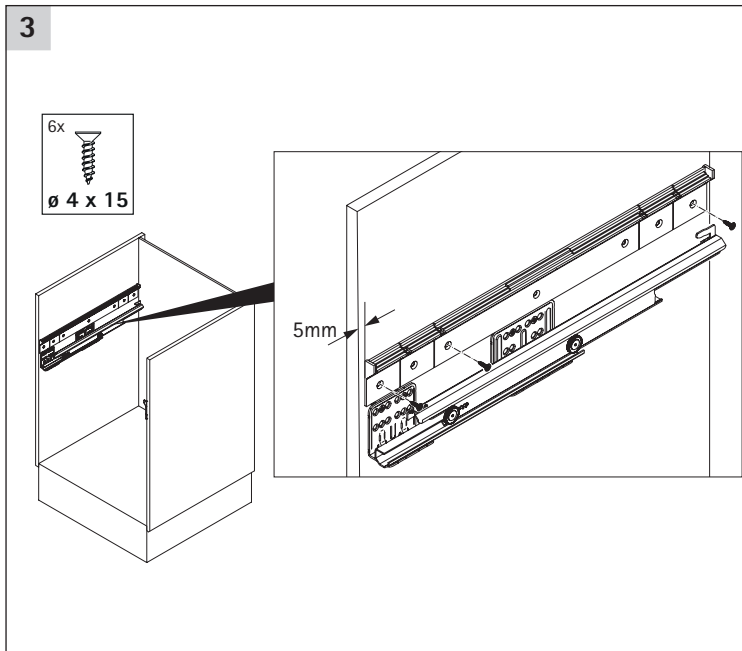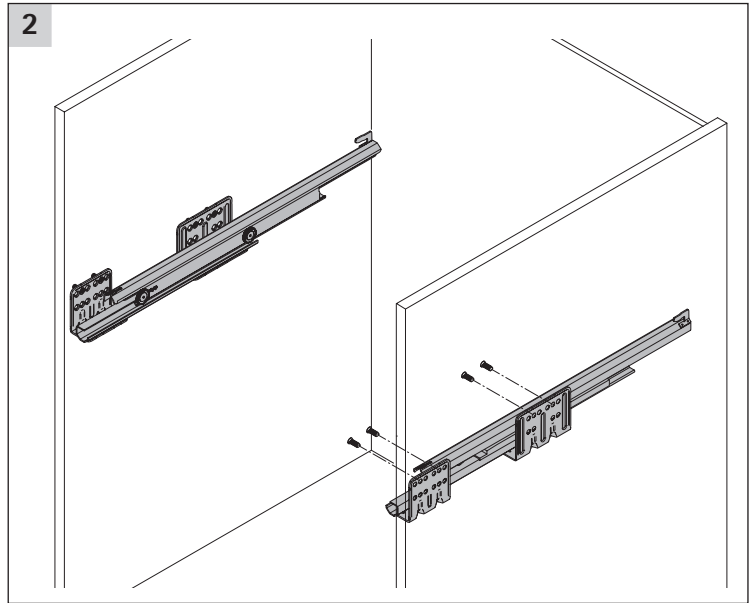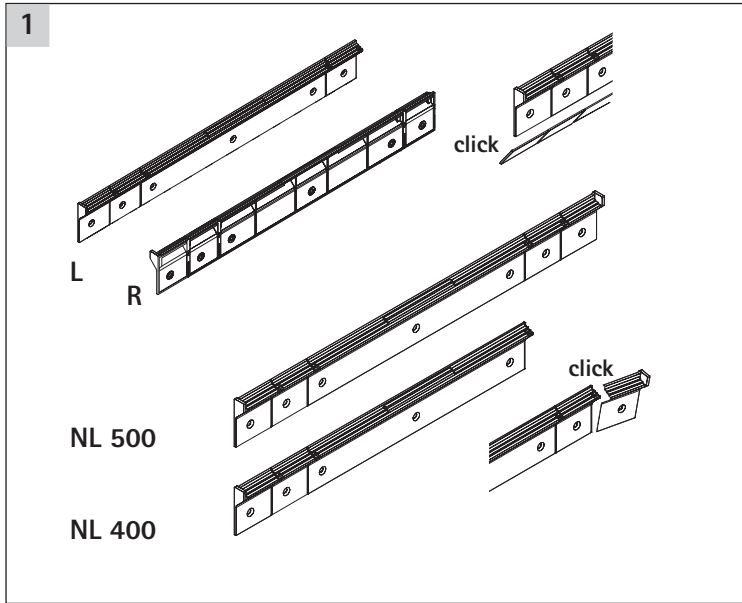

ArciTech Pull

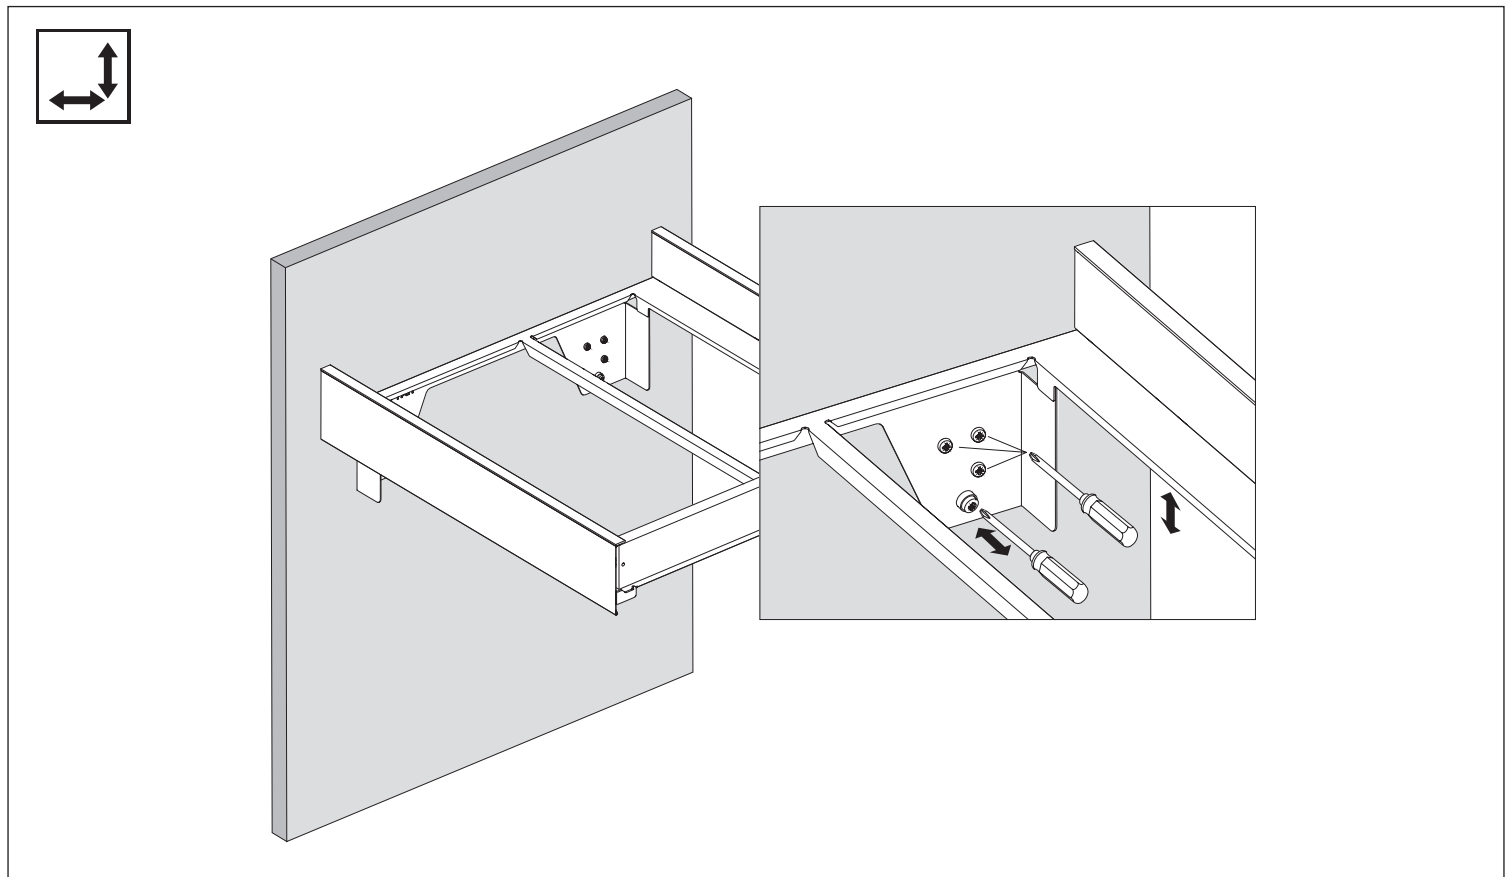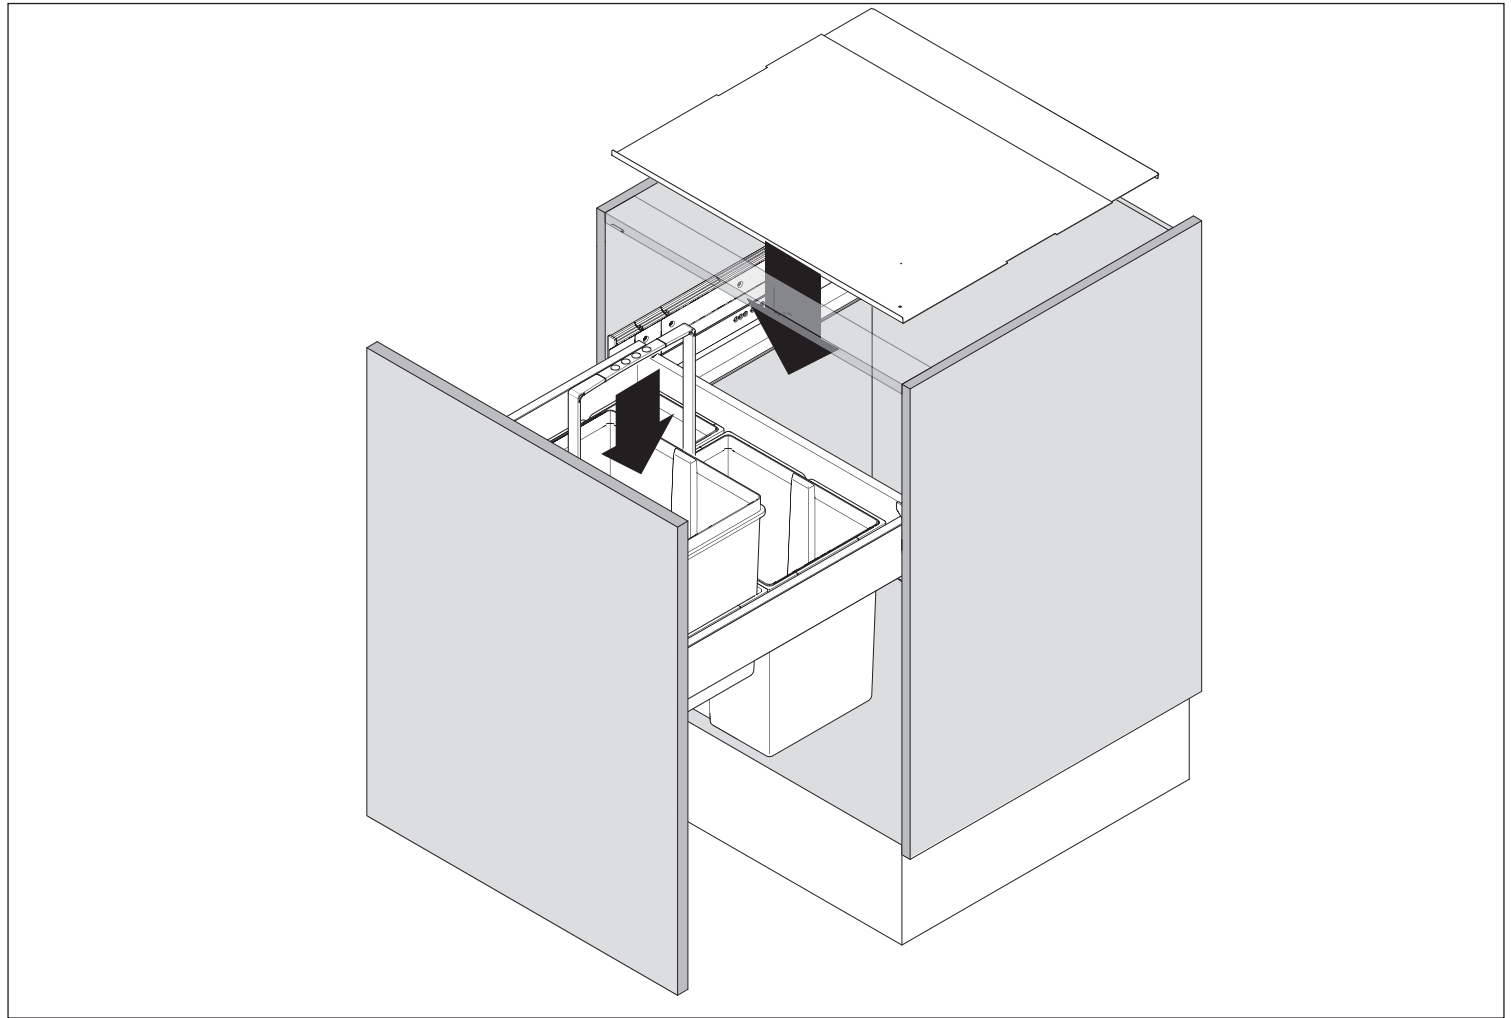  

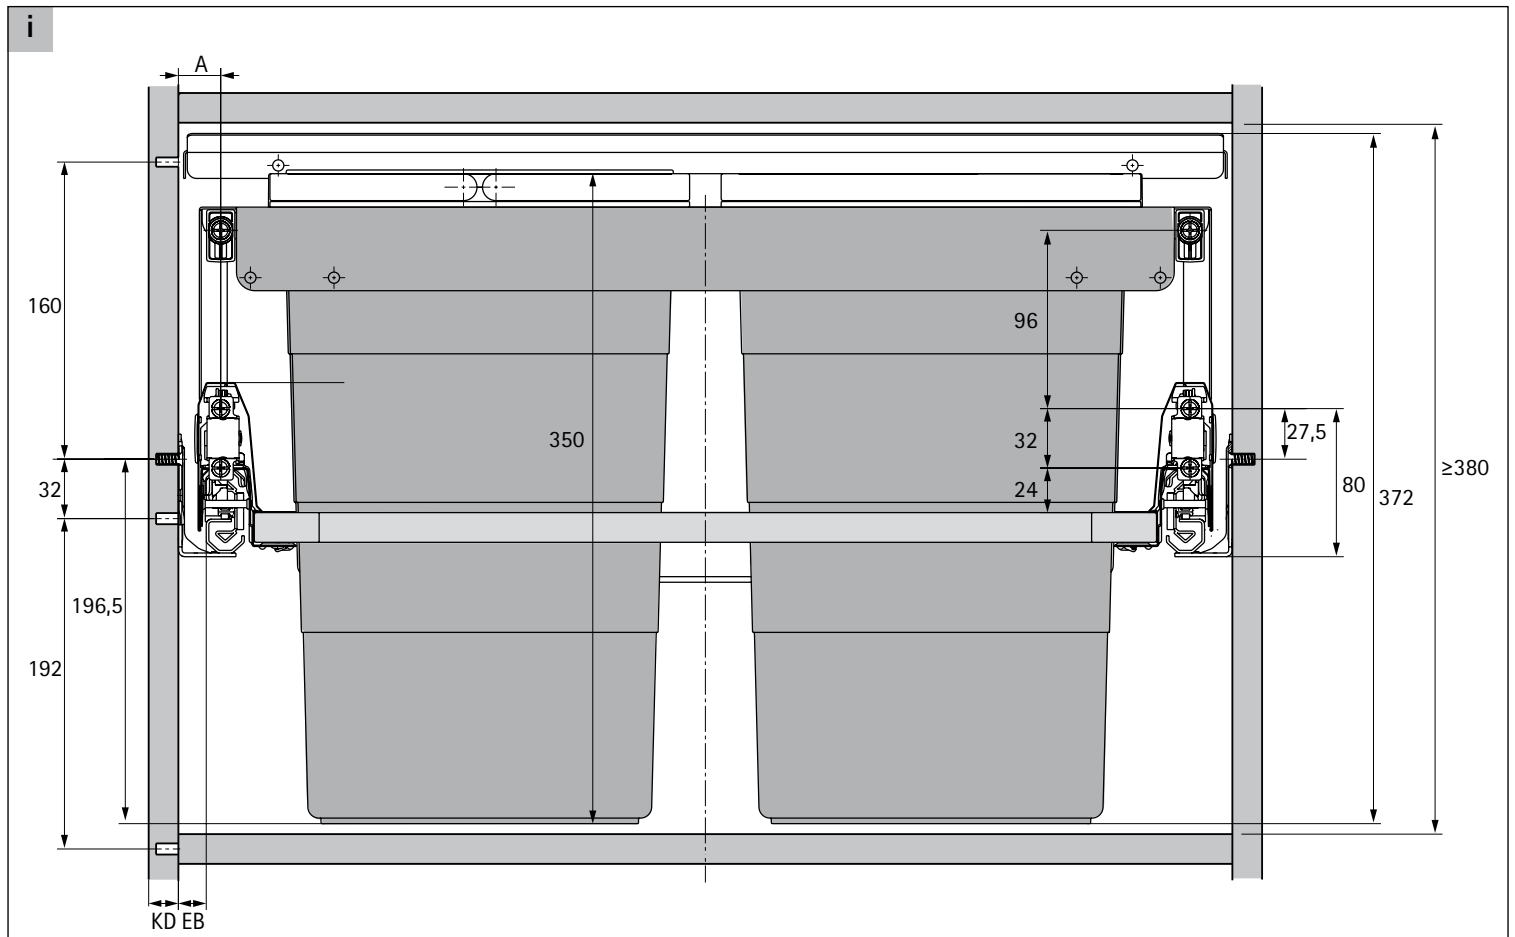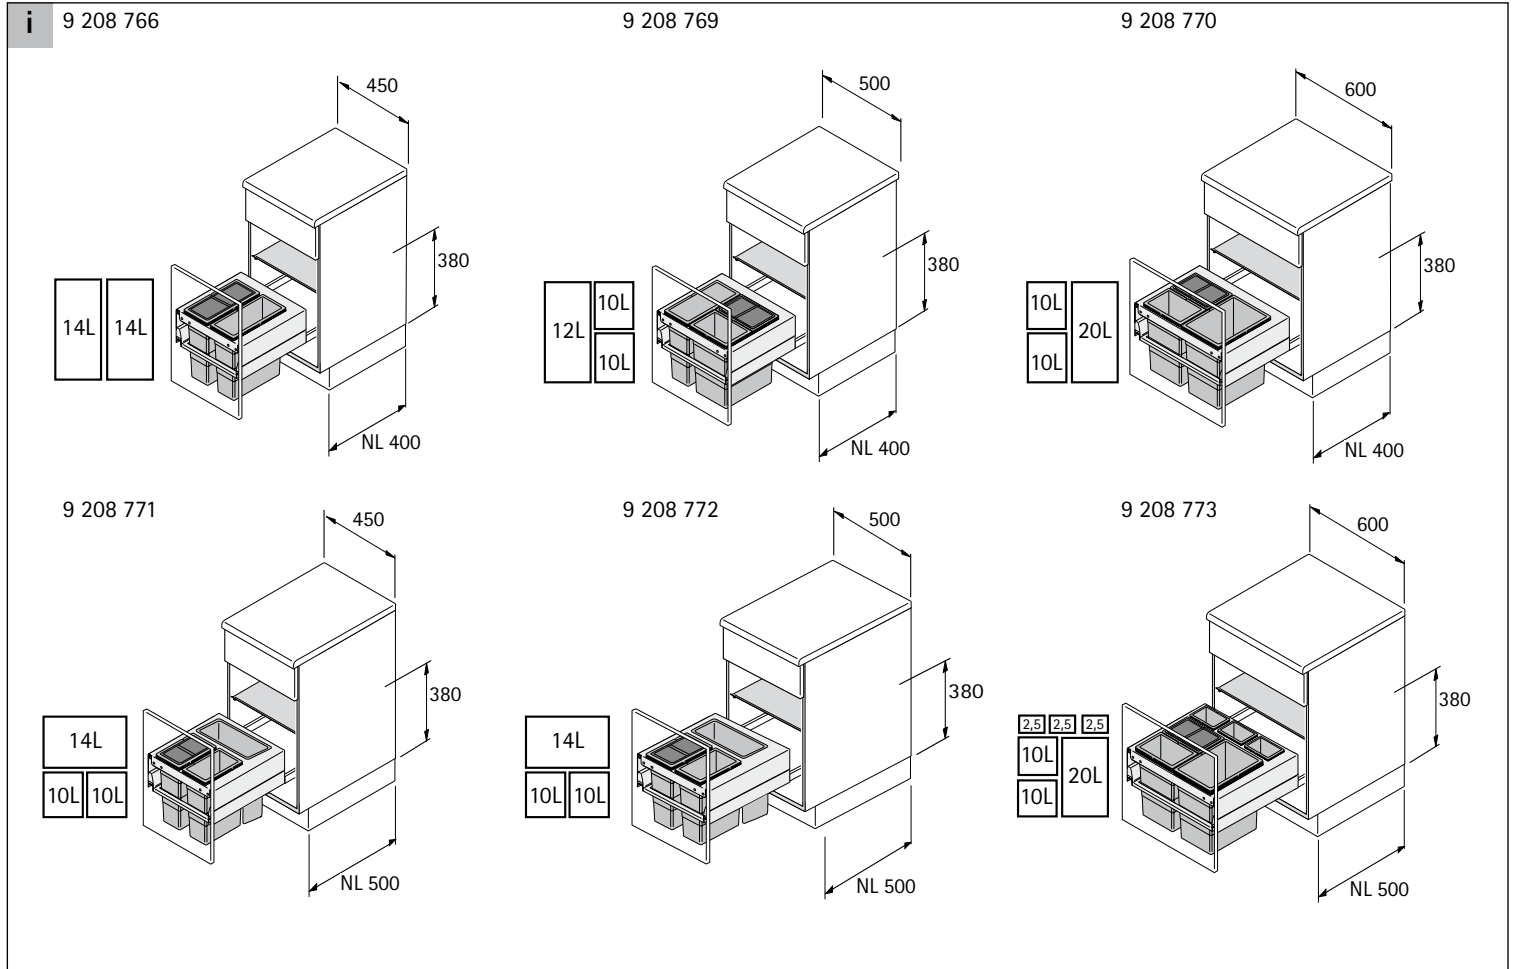  

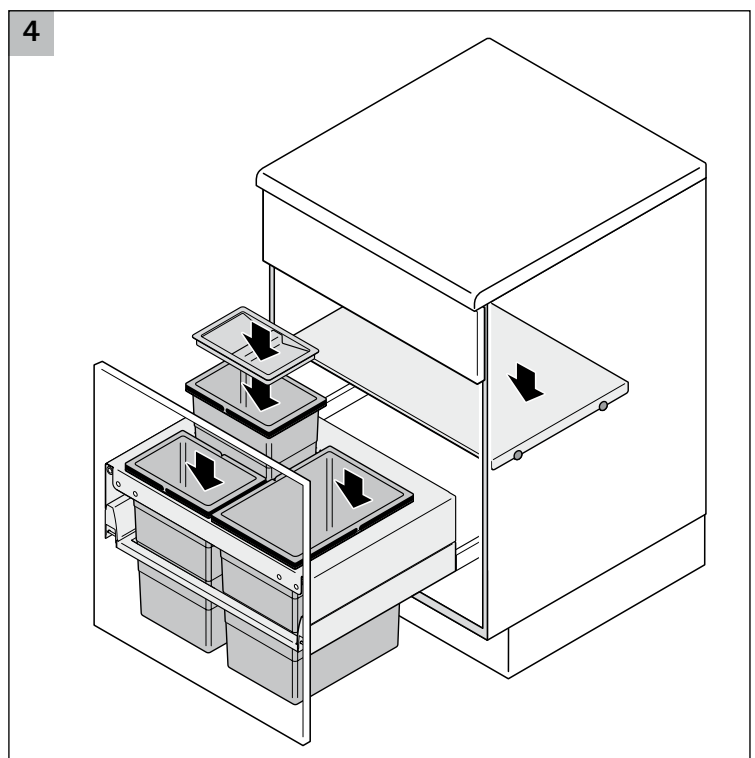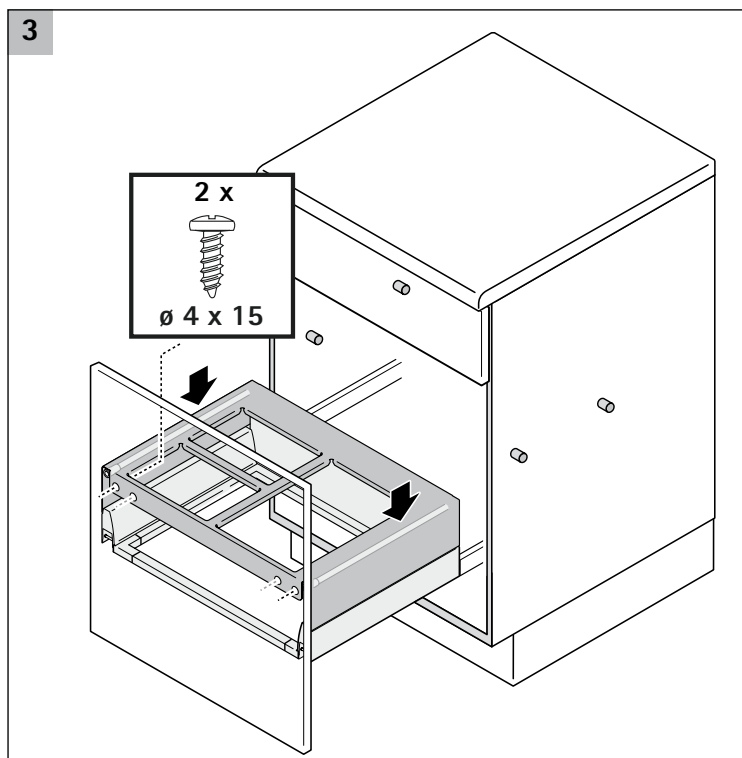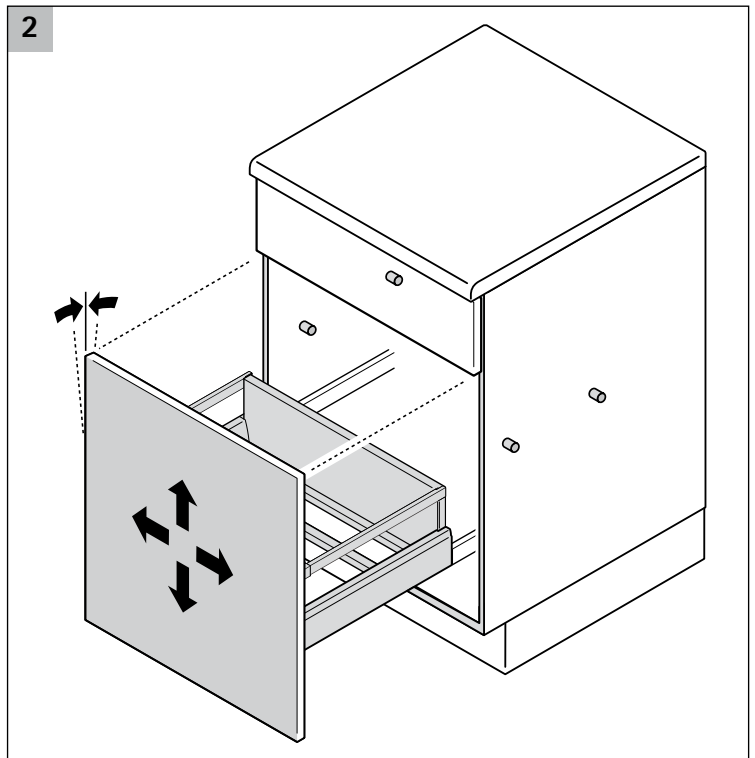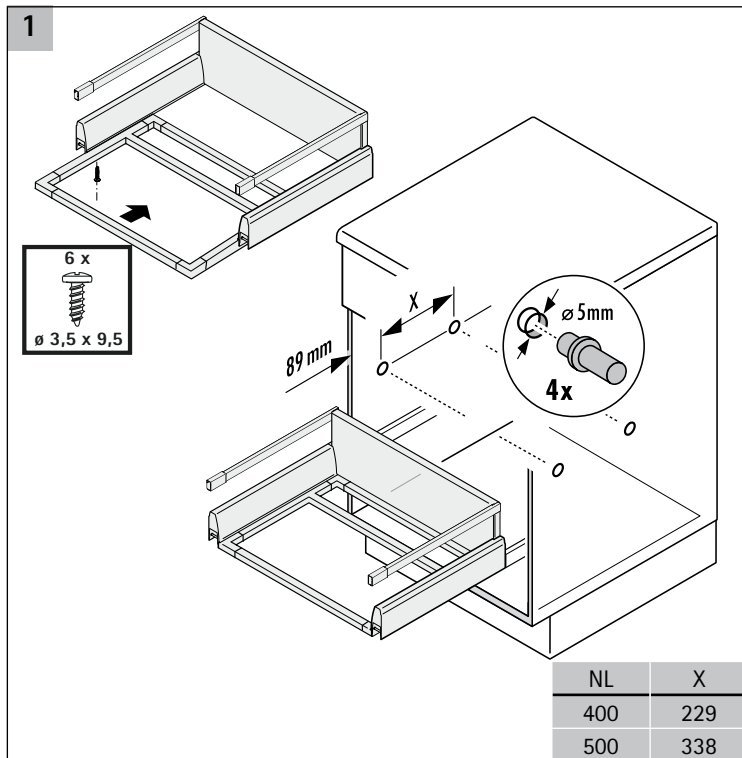    


i Nur handelsübliche, wasserlösliche Reinigungsmittel benutzen, keine aggressiven, scheuernden Mittel verwenden.






Use only standard water-soluble cleaning agents. Do not use aggressive or scouring agents!

Utiliser uniquement des nettoyeurs courants solubles à l'eau, ne pas utiliser de nettoyeurs agressifs récurants.

 Gebruik uitsluitend in de handel gebruikelijke, in water oplosbare schoonmaakmiddelen, gebruik geen agressieve, schurende middelen.

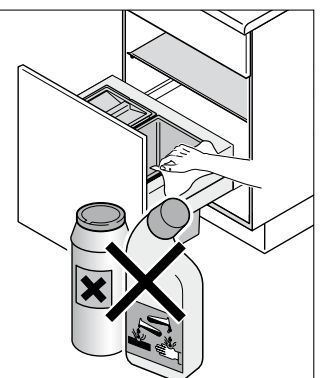

<p>i 9 208 774 (NL 500) 9 208 779 (NL 550)</p>	<p>9 208 776 (NL 500) 9 208 783 (NL 550)</p>	<p>9 208 777 (NL 500) 9 208 784 (NL 550)</p>	<p>9 208 778 (NL 500) 9 208 785 (NL 550)</p>
---	--	--	--

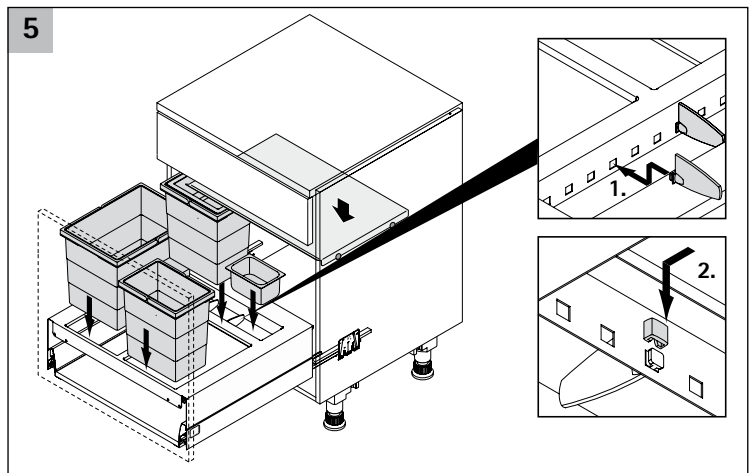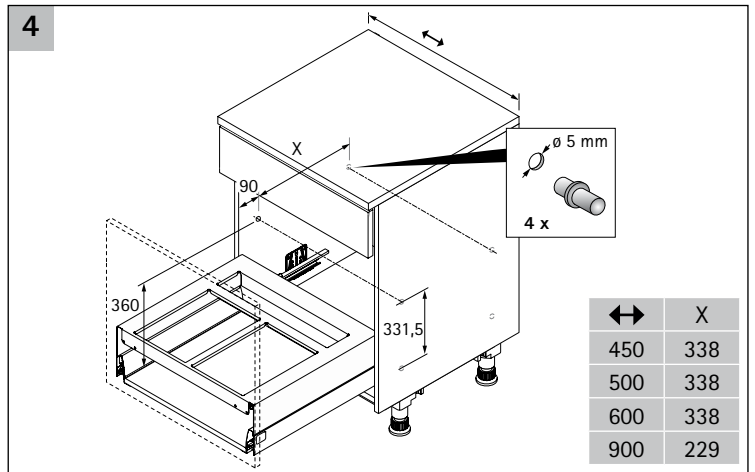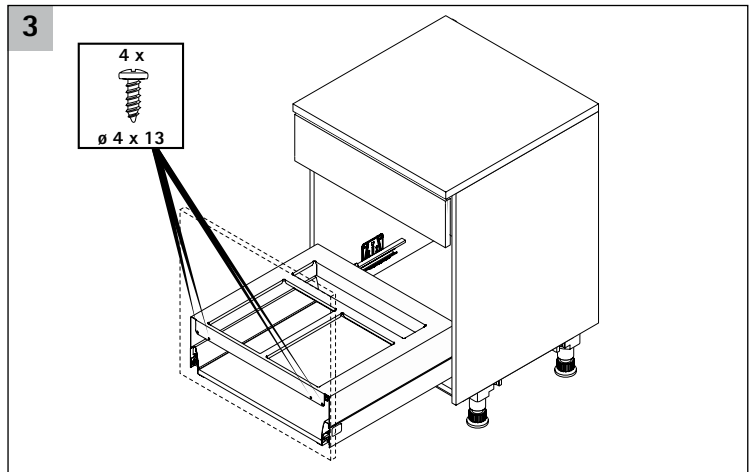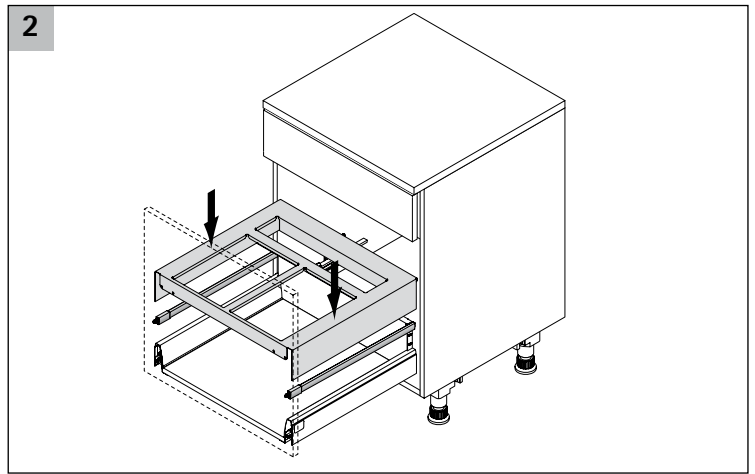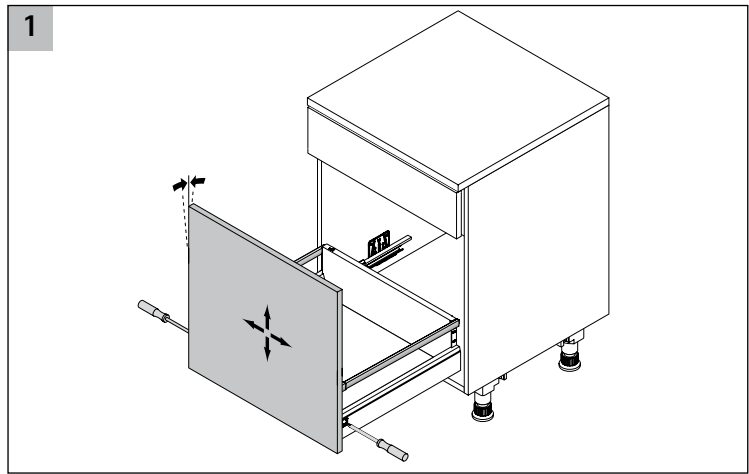     

i

Nur handelsübliche, wasserlösliche Reinigungsmittel benutzen, keine aggressiven, scheuernden Mittel verwenden.

Use only standard water-soluble cleaning agents. Do not use aggressive or scouring agents!

Utiliser uniquement des nettoyeurs courants solubles à l'eau, ne pas utiliser de nettoyeurs agressifs récurants.

Gebruik uitsluitend in de handel gebruikelijke, in water oplosbare schoonmaakmiddelen, gebruik geen agressieve, schurende middelen.