
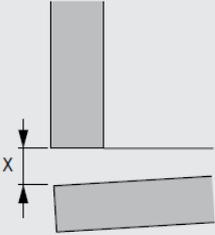



Push to open opening system for handleless furniture fronts

| | | |
|---|--------------------------|--|
|  | <p>X = approx. 14 mm</p> | <p>Push to open Pin, short version</p> |
|  | <p>X = approx. 37 mm</p> | <p>Push to open Pin, long version</p> |

Drilling pattern for short version, overlay door or inset door

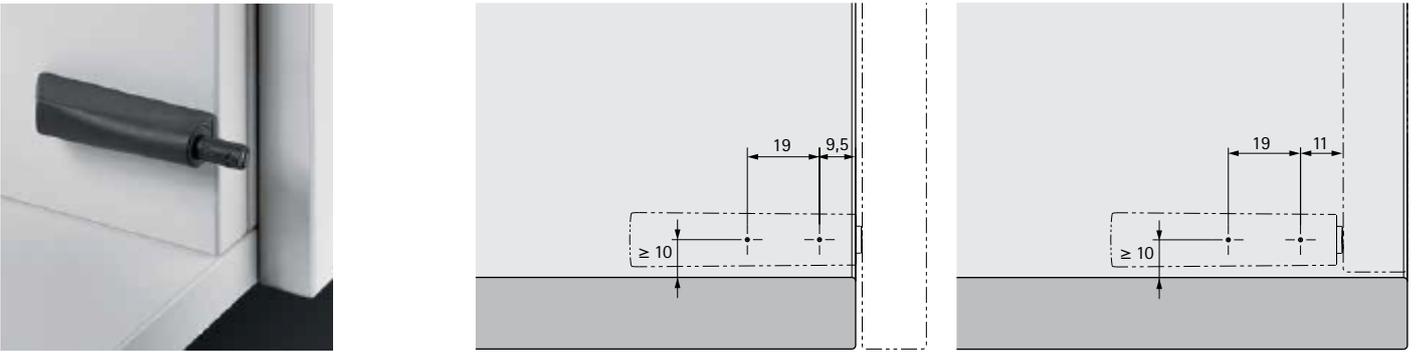

Drilling pattern for long version, overlay door or inset door

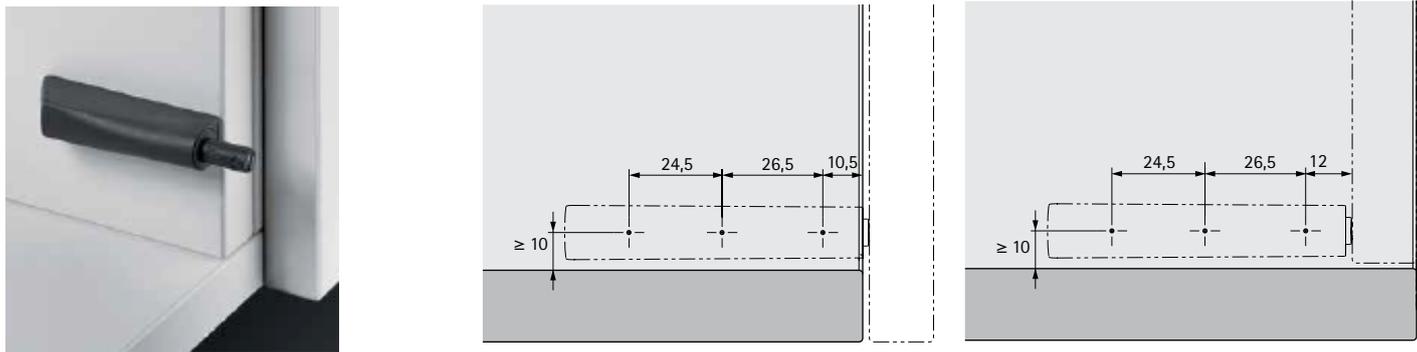



Drilling pattern for short version, overlay door







Drilling pattern for long version, overlay door









Drilling pattern for the attachment housing for overlay or inset door with Push to open Pin

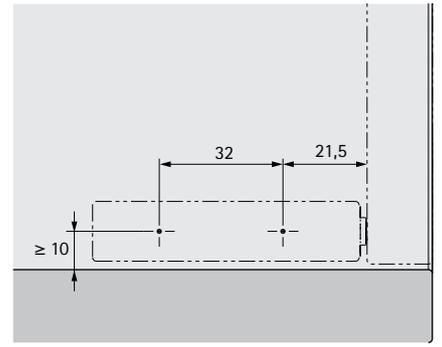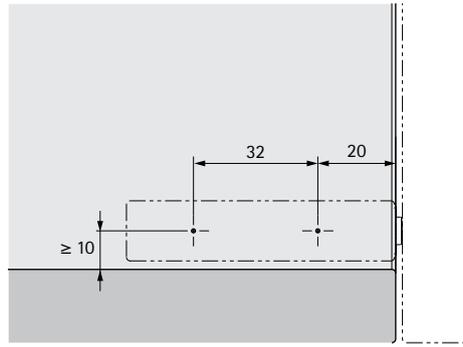




Drilling jig for Push to open

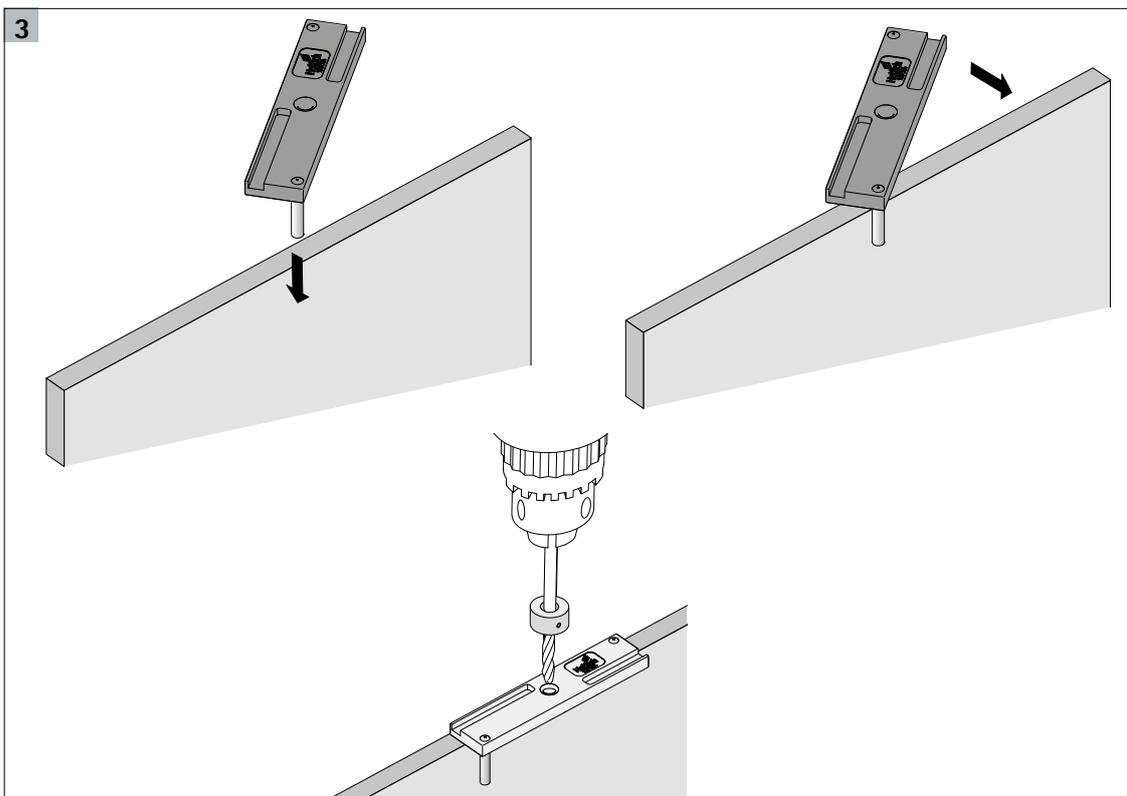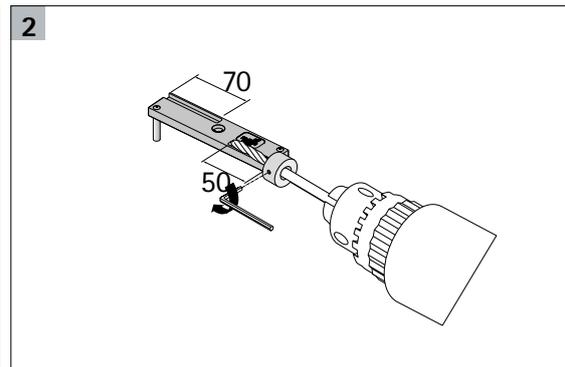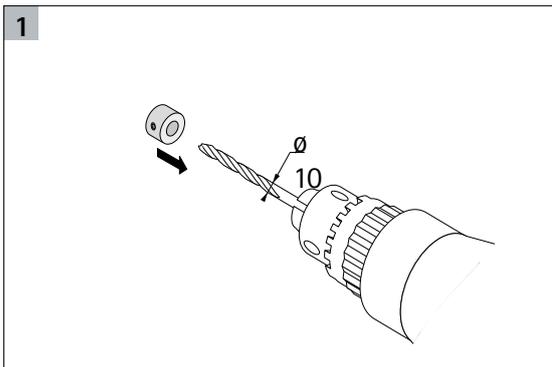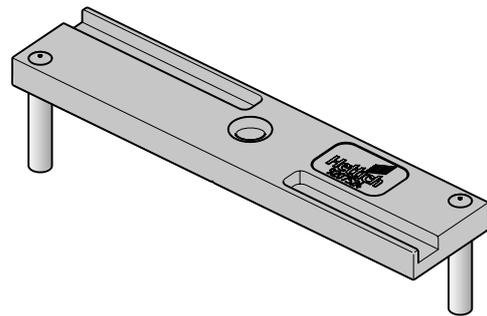


Installing Push to open for screwing on

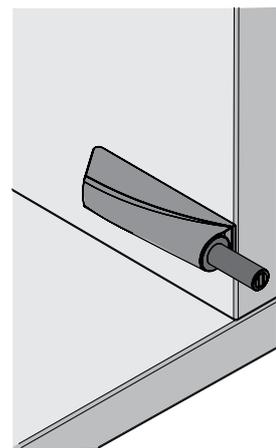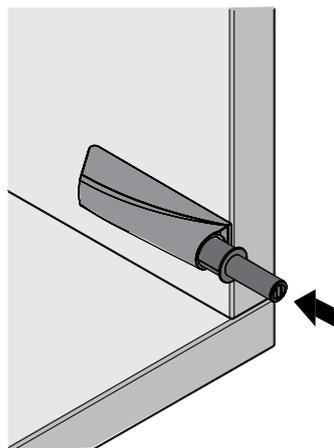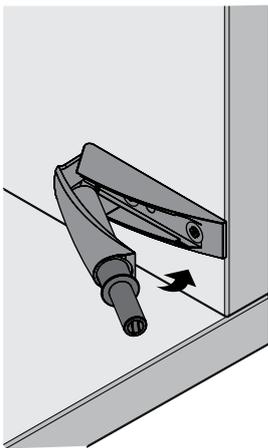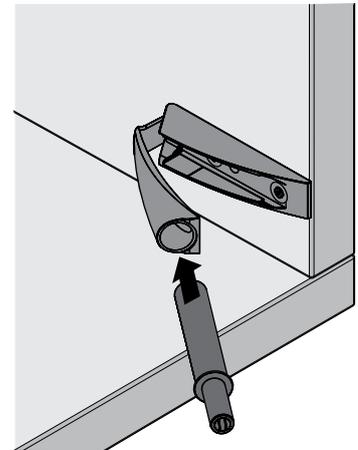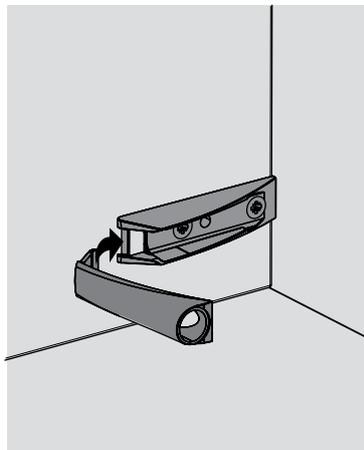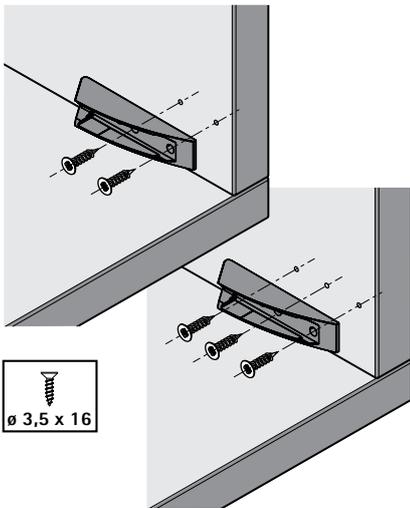


Adjusting Push to open for screwing on

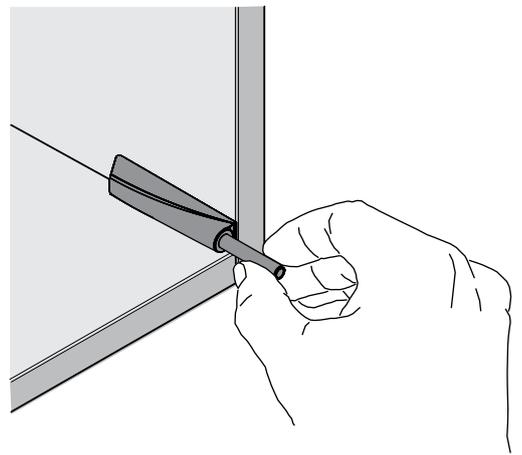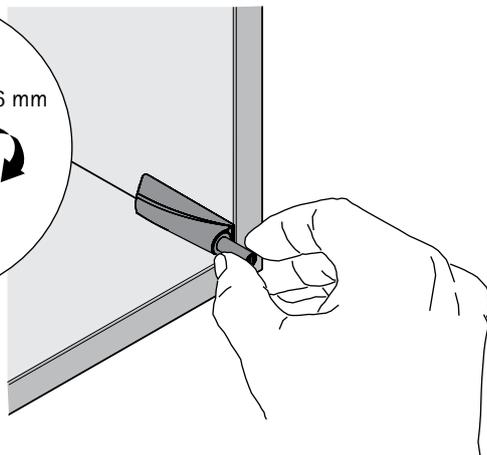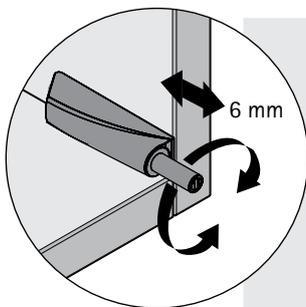


Installing Push to open for drilling in

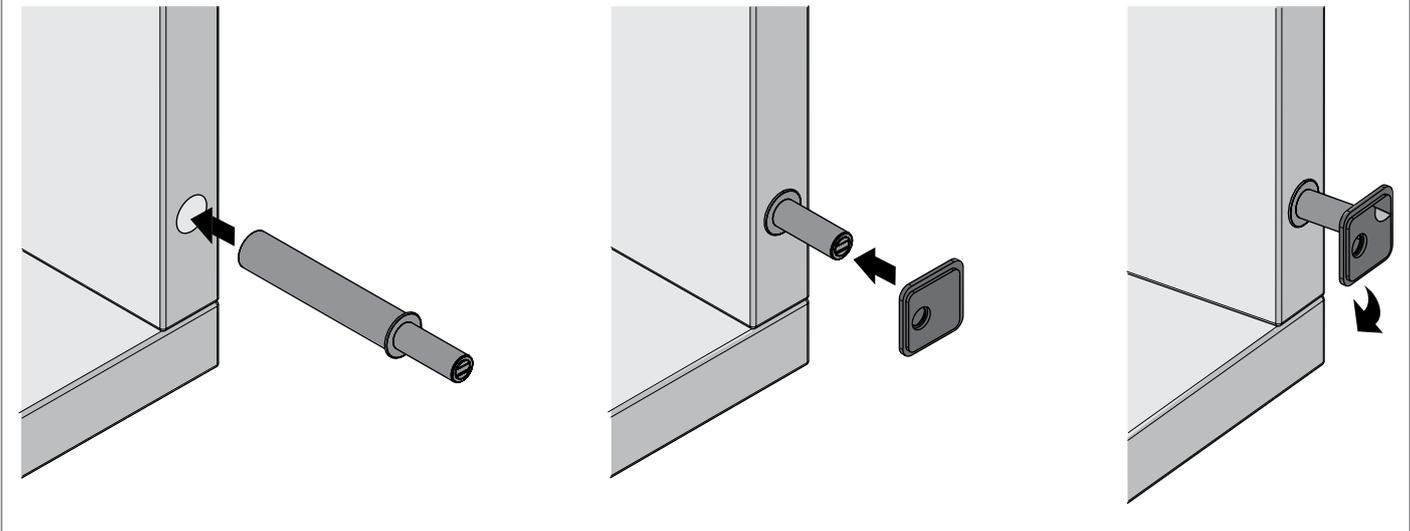

Installing counterplate for gluing and screwing on

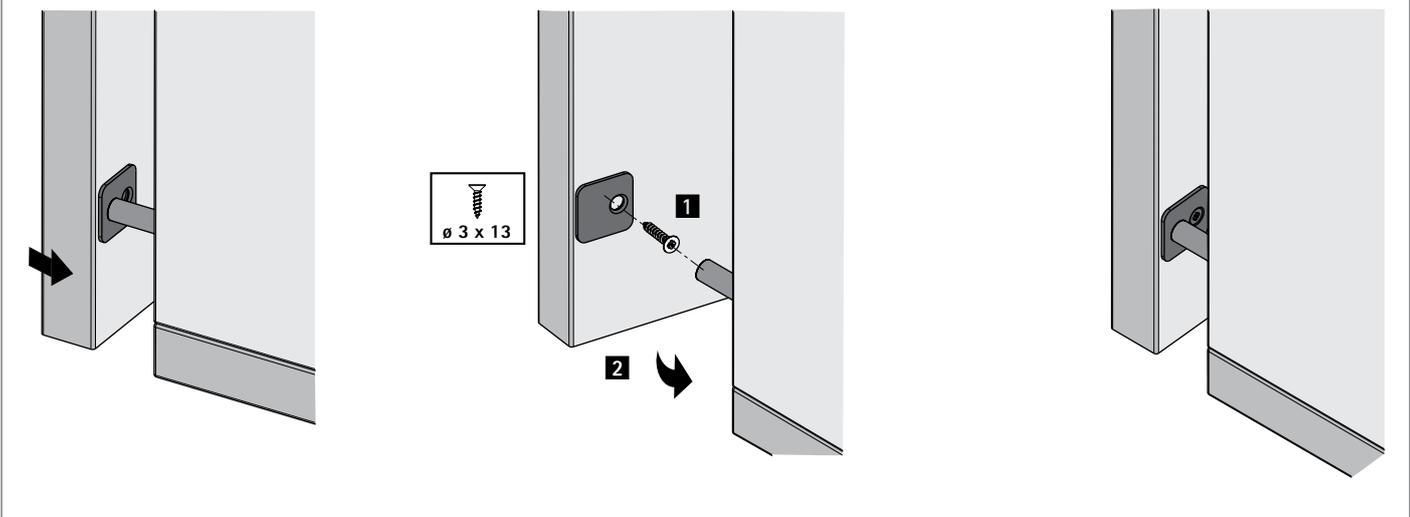

Adjusting Push to open for drilling in

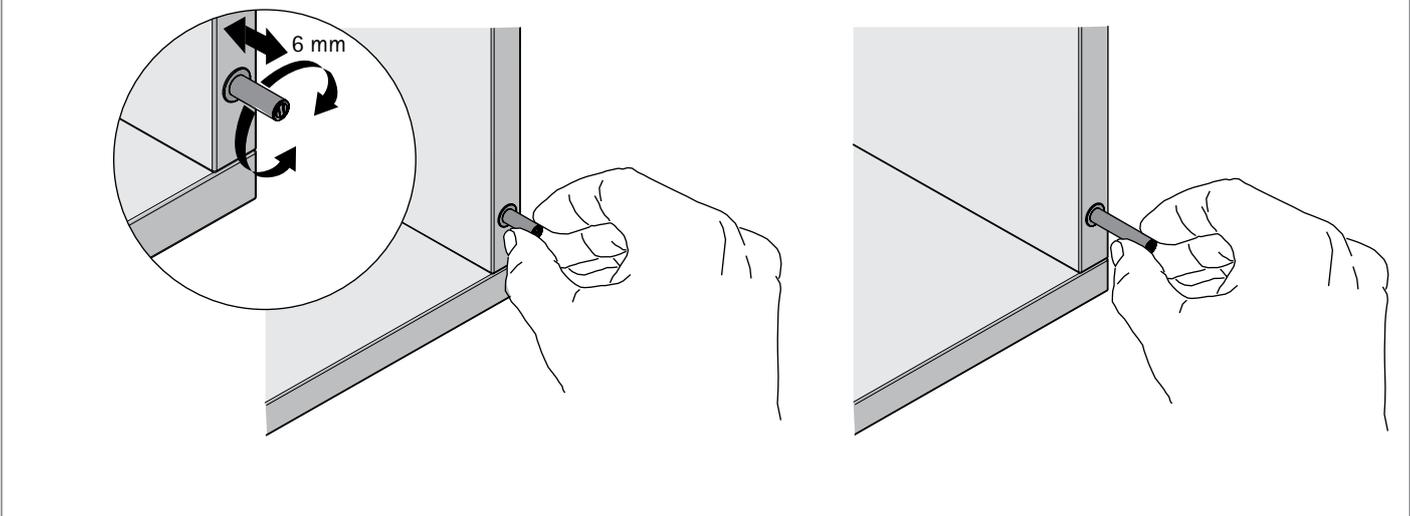

Installing Push to open design adapter


Ø 3,5 x 16

